PREMIER®

MANUAL DE INSTRUCCIONES
CAFETERA ELÉCTRICA
CM-4356

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

INSTRUCCIONES DE OPERACIÓN

Lea atentamente las siguientes instrucciones antes de usar la unidad:

- Limpie los recipientes de la unidad antes de usarla por primera vez.
- Levante la tapa del tanque de agua y llénelo con agua limpia hasta el nivel requerido.
- Coloque una cantidad adecuada de café en polvo o hojas de te en el cono del filtro.
- Coloque el cono del filtro en el recipiente de vidrio y luego coloque el recipiente sobre la placa calefactora.
- Cuando encienda la unidad, el indicador se encenderá y la unidad empezara a funcionar.
- Deje el recipiente de vidrio sobre la placa calefactora si desea que el te o el café permanezca caliente.

DESCRIPCIÓN DE LA UNIDAD

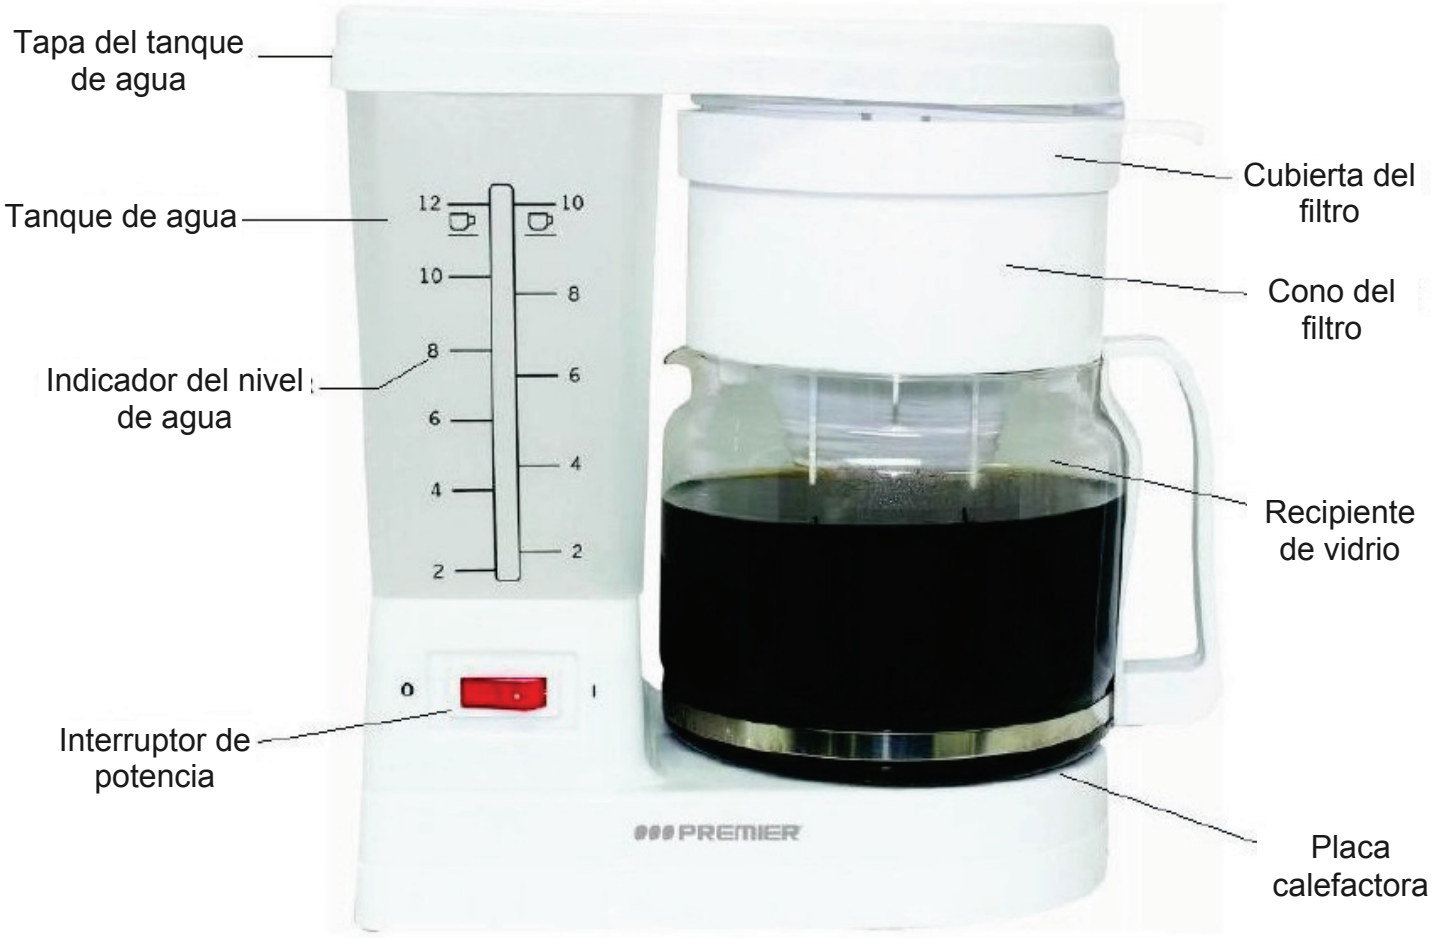

PRECAUCIÓN

- Si necesita agregar mas café en polvo o hojas de te durante la operación, apague la unidad y enciéndala nuevamente unos minutos después.
- Si no hay agua en el tanque de agua, apague la unidad. Si desea mantener el café o te caliente, encienda la unidad solo por cortos periodos de tiempo en intervalos frecuentes.
- No sumerja la unidad en agua o en cualquier otro liquido.
- Use solo agua limpia.
- No toque la placa caliente mientras la unidad se encuentre en funcionamiento ó inmediatamente después de apagarla, ya que la placa alcanza altas temperaturas.
- Después de usar la unidad muchas veces, es necesario que lave el cono del filtro, recipiente de vidrio y tanque de agua con agua tibia y detergente.

ESPECIFICACIONES

Voltaje: AC110V/60Hz
Potencia: 650 Vatios

DIAGRAMA DE CIRCUITOS

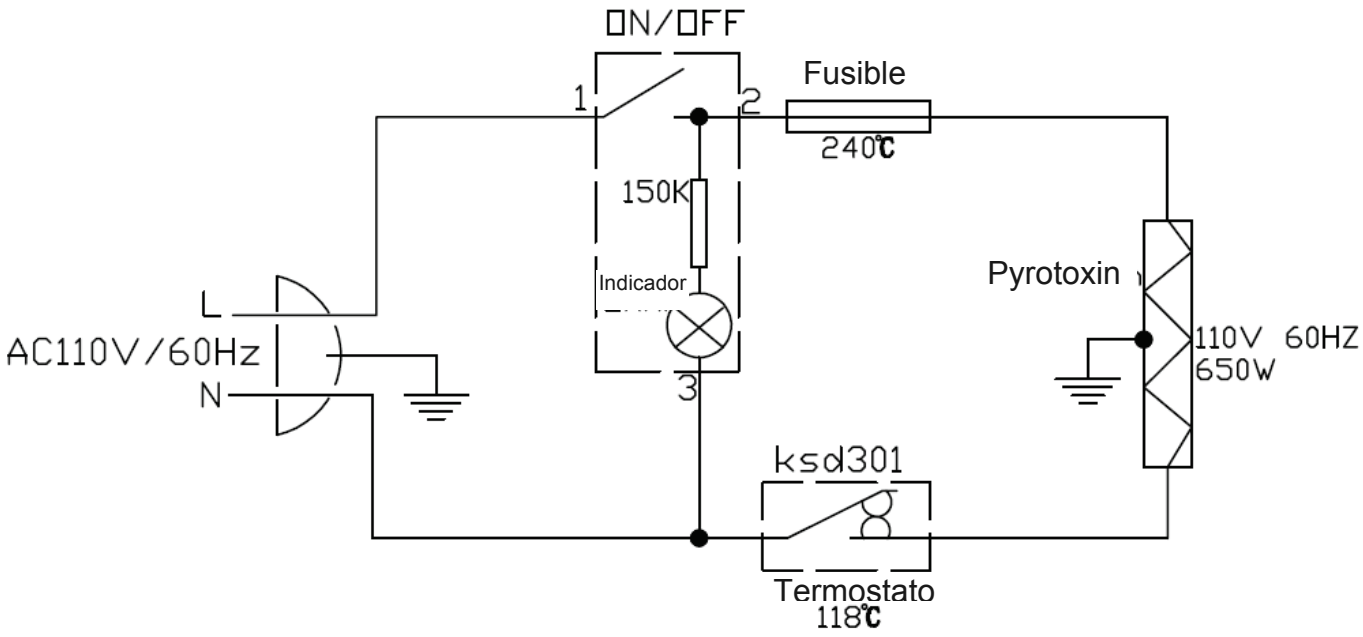

PREMIER®

INSTRUCTION MANUAL
COFFEE MAKER
CM-4356

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

OPERATION INSTRUCTIONS

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE MAKER

1.CLEAN THE CONTAINERS WHEN THEY ARE USED FOR THE FIRST TME

2. UNCOVER THE WATER TANK LID AND FILL IN CLEAN WATER TO REQUIERED LEVEL

3.PUT ADEQUATE QUANTITY OF COFFEE POWDER OR TEA LEAVES IN THE FILTER CONE

4. PUT THE FILTER CONE ON THE CLASS MUG AND THEN PUT BOTH OF THEM ON THE HOT PLATE

5. WHEN YOU SWITCH ON THE POWER, THE INDICATOR WILL LIGHT UP AND THE MAKER WILL BEIN OPERATION.

6. CONTINUING TO KEEP THE GLASS MUG ON THE HOT PLATE CAN KEEP THE COFFEE OR INSIDE WARM.

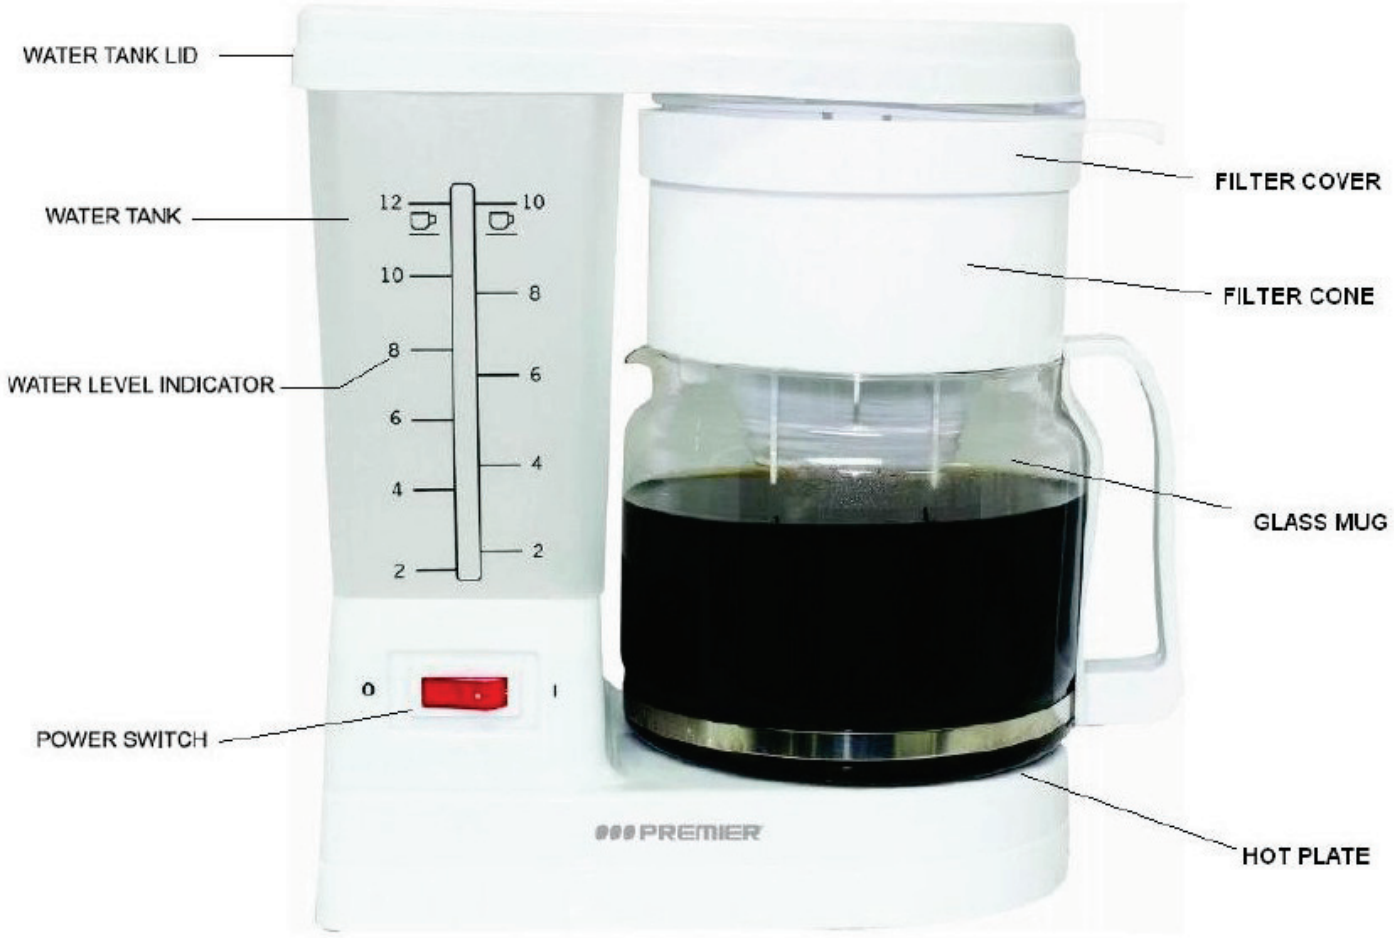

CAUTION

1. IF SOME COFFEE POWDER OR TEA LEAVES SHOULD BE ADDED DURING OPERATION, PLEASE SWITCH OFF THE POWER AND SWITCH ON AGAIN A FEW MINTES LATER

2. IF THERE IS NO WATER IN THE WATER TANK, SWITCH OFF THE POWER IF YOU WANT TO KEEP THE COFFEE OR TEA WARM, SWITCH ON THE POWER ONLY FOR A SHORT TIME IN FREQUENT INTERVALS.

3. DONT PUT THE COFFEE MAKER INTO WATER OR ANY OTHER LIQUID.

4. ONLY CLEAN WATER SHOULD BE USED

5. DONT TOUCH THE HOT PLATE WHILE THE MAKER IS IN OPERATION LR IMMEDLATELY AFTER SWITCHING OFF, AS THE HOT PLATE WILL BE VERY HOT.

6. AFIER USING FOR MANY TIMES, THE FILTER CONE, GLASS MUG AND WATER TANK MUST BE CLEANED THOROUGIILY WITH WARM AND DETERGENT

VOLTAGE : AC110V/60Hz
POWER : 650 WATTS

CIRCUIT DIAGRAM